


# CHANGING DRAWING MODELS IN DRAWINGS

\* THERE WILL BE OCCASIONS THAT YOU WANT TO CHANGE THE "MODEL" THE DRAWING IS REFERENCING

\* YOU MUST FIRST HAVE THE DRAWING OPEN AND THE DRAWING MUST BE YOUR ACTIVE DRAWING.

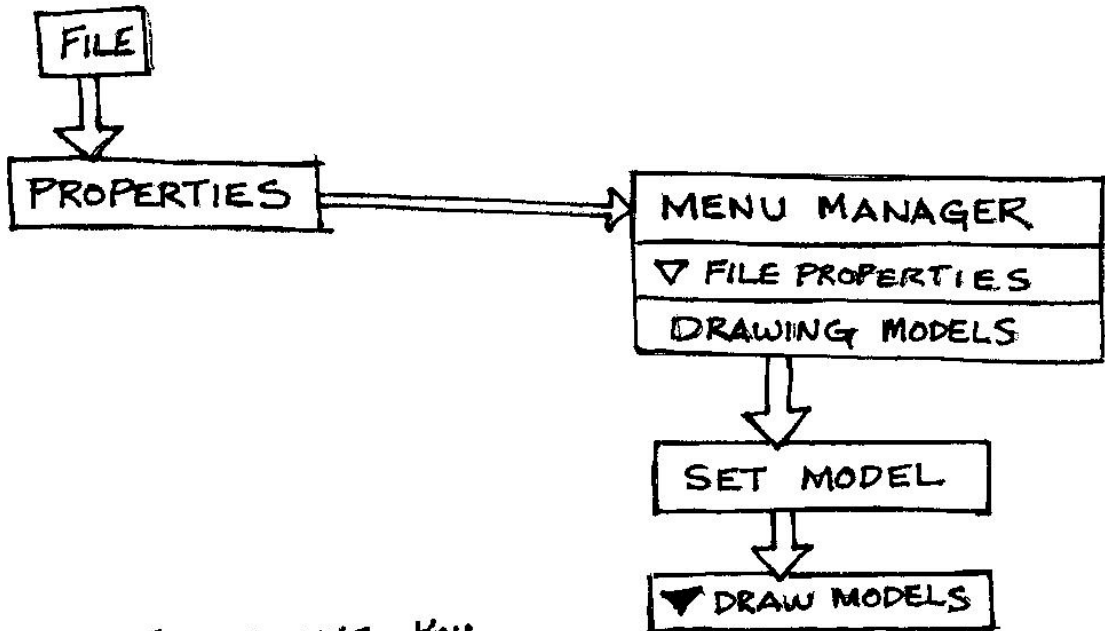

IN THIS DRAWING YOU HAVE TWO MODELS AVAILABLE:

THE "ABCD\_MODEL"  
AND THE "ABCD\_MODEL\_FLAT"

ABCD\_MODEL  
ABCD\_MODEL\_FLAT

NOTE: THE "\_FLAT"  
IS A FLAT STATE FOR  
METAL PARTS