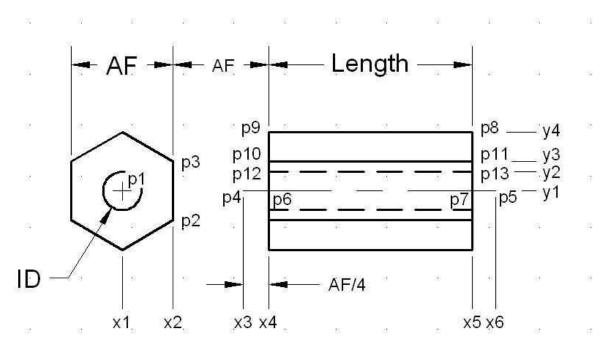# Draw a Standoff Program

Programming Sketch

The Instructions

Image for the Form

Add the code to the cmdClear subroutine.

Add the code to the cmdExit subroutine.

Add the code *DrawStandoff* to the cmdDrawStandoff subroutine.

Go to Insert Module and type:
Sub DrawStandoff()
        FrmStandoff.Show
End Sub

Under the General Declarations section of the code, write the subroutine DrawStandoff to draw the Standoff.